





# MID-TOWN STYLING STATION

SKU:795-51

Our Mid-Town Styling Station is designed after some of NYC's most prominent skyscrapers in that area of the city.

The angled ledge and wave mirror add a very eye-catching element. With its sleek lines and Art Deco inspired design, the Mid-Town Station is suitable for any salon or spa.

#### TECHNICAL INFORMATION

- Measures: 51"W x 20"D x 93"H
- Tapered cabinet
- Custom wall-mounted framed mirror
- Angled ledge
- Two drawers
- Fully equipped tool panel, power strip, elevated work surface

#### SHIPPING INFORMATION

Item generally ships via Freight(Truck) service

- Weight: 250 lbs
- Dimensions: 84"L x 32"W x 50"H

#### WARRANTY

#### 3 Year:


- Molded urethane arms
- Cabinet drawer-slides

#### 2 Year:

- All Shampoo Bowls
- Vacuum breakers

#### 1 Year:

• All remaining components, unless noted otherwise

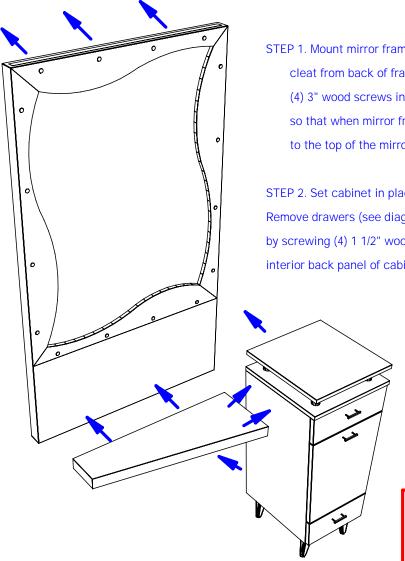

STEP 1. Mount mirror frame to wall by removing lower french cleat from back of frame and mount cleat to wall with


(4) 3" wood screws into wall studs. Mount at a height so that when mirror frame is in place the distance from floor to the top of the mirror framr is 93". See diagram 7.


STEP 2. Set cabinet in place (see detail in top right corner).

Remove drawers (see diagram 8). Mount cabinet to mirror frame by screwing (4) 1 1/2" wood screws with beauty washers through interior back panel of cabinet into mirror frame.

STEP 3. Mount purse ledge to mirror frame with (3) 1 1/4" wood screws through ledge into mirror frame. Mount ledge to cabinet with (2) 1 1/4" wood screws through ledge into cabinet.

Power strip is provided with a 4' grounded cord and (6) 15 amp outlets. Electrician is to cut outlet hole for cord and provide power supply.

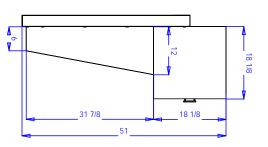

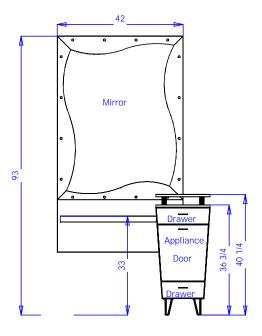



# Quantity - Qty


### Finish Schedule - 795-51-1


Face Color - Face Color Top Color - Top Color Toe Color - (Specify) Pulls - Chorme Wire Interior - White


Other (Specify) -


## **Installation Notes:**

- 1. All hardware needed for assembly is included.
- 2. Large items are preassembled at the factory to ensure proper alignment. Items are then disassembled into managable sections for shipping purposes and ease of reassembly.
- 3. Shipping cleats need to be removed before installation. These cleats are installed to prevent damage.

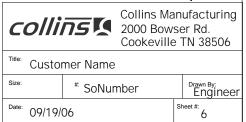


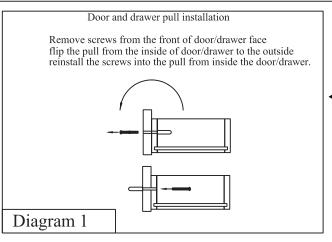


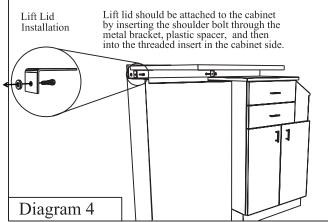

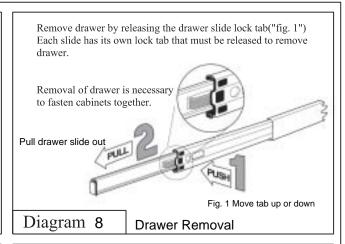


Cabinets should be attached to wood framed walls by screwing through the interior back panel into wall studs or blocking. Fasters for wood framed walls are provided. The fasteners for other wall types are not provided.

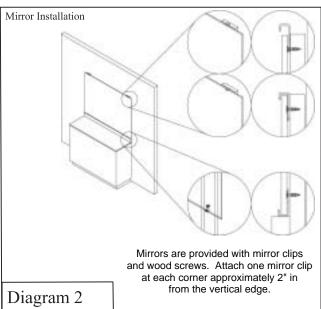

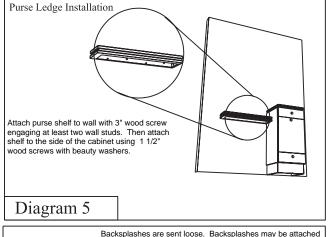




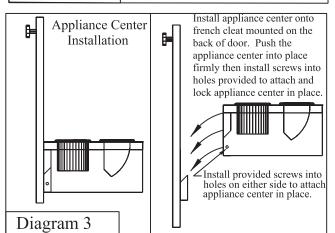


BackSplash/ by using provided mending plates or by using contractor's adhesive. If using mending plates, attach mending plates to Mending Plate backsplash then to the cabinet using the screws provided. Installation See diagram below. Diagram 6 French cleat detail French cleat should be attached to the

at the indicated height.

Diagram 7

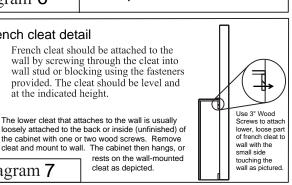

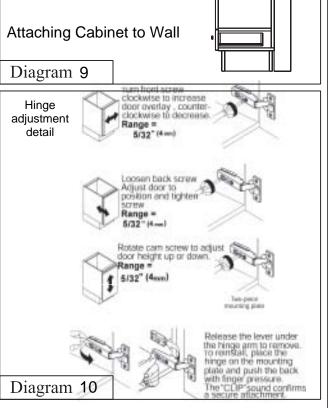

3" wood screw wit beauty washer