



AMATI BI-LEVEL TALL STYLING STATION

SKU:940-48

The Amti Bi-Level Styling Vanity with retail is an eye-catching way to enhance your salon or spa. The bi-level look features a beautiful upper storage cabinet, supported by only 3 steel legs, not taking away from your working space. The high-style mirror on steel legs with draw attention to any salon space.

TECHNICAL INFORMATION

- Measures: 48"W x 15"D x 80"H
- Amati steel legs
- 3 Drawers
- Fully equipped tool panel w/ power strip
- Upper storage cabinet w/ shelf
- Lower storage cabinet w/shelf Amati mirror assembly w/30" x 48" mirror

SHIPPING INFORMATION

Item generally ships via Freight(Truck) service

- Weight: 380 lbs
- Dimensions: 1 SKID 1 CARTON


WARRANTY

3 Years:

- Ball-Bearing Drawer Slides
- Cabinet hinges

1 Year:

• All remaining components, unless noted otherwise, are guaranteed for a period of one year from the date of purchase.

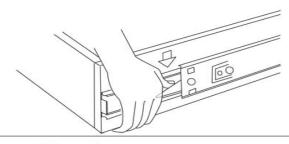

To Remove Drawer

Pull the drawer fully open so levers are visible Push "down" on the right lever(shown) and "un" on the left lever Holding levers in place, pull drawer toward you.

Bring ball retainer fully forward and carefully reinsert drawer member slide into the cabinet member slide, guiding the drawer member raceway between the ball bearings


Completely close drawer.

Open and close drawer to ensure the slide is fully engaged into the ball bearing track.

> 3" wood screw with beauty washer

Cabinets should be attached to wood framed walls by screwing through the interior back panel into wall studs or blocking. Fasters for wood framed walls are provided. The fasteners for other wall types are not provided.

Attaching Cabinet to Wall

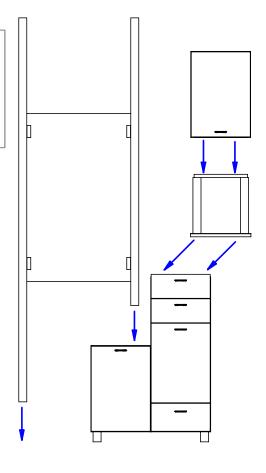

To assemble the Amati station follow this procedure.

- 1) Place the spacer assembly on top of the lower cabinet assembly and use the provided connector bolts to pass through the (4) predrilled holes in the sub top of the lower cabinet into the threaded inserts in the spacer. Tighten with the provided allen wrench.
- 2)Place the upper cabinet on top of the spacer assembly. Use the provided connector bolts to pass through the (2) predrilled holes in the sub deck of the upper cabinet into the threaded inserts in the spacer. Tighten with the provided allen wrench.
- 3) Place the cabinet assembly as desired against a framed wall. Use the provided 3" wood screws to secure the cabinet to the wall behind. You may conceal the screw heads by placing them behind the drawers. Use the illustrated procedure for removing and reinstalling the drawers.
- 4) Assemble the mirror frame by passing the supplied screws into the pre-drilled/tapped holes in the metal. You may wish to cut the side pieces of the mirror frame down to accommodate your ceiling type.
- 5) Place the mirror frame on top of the lower base and against the wall. The reccomended spacing is 3" from the side of the metal to the side of the tall base cabinet. Use the supplied wood screws to attach the mirror frame panel to the wall.
- 6) With the cabinets and mirror frame installed, locate the supplied mirror clips and attach to pre drilled holes in the mirror frame. Install mirror by first seating into the bottom clips then lifting the upper clips to seat the top of the mirror.

Finish Schedule - 940-48-1

Face Color -

Top Color -

Toe Color - Sliver Legs Reveal / Accent Color -Hardware - Amati Pulls Interior - Black Melamine Other (Specify) -

General Notes:

- 1. All counter tops are to be made removable wherever possible.
- 2. Items must be broken into managable sections For Shipping, Mark For Ease Of Reassembly.
- 3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
- 4. Purchased items Must Be Trial Fit Before Shipping.



Collins Manufacturing Cookeville, TN 38506


940-48 Assembly


Sheet

Drawing Number: NTS Job Drawn Bv:

10/11/07

3 of 6

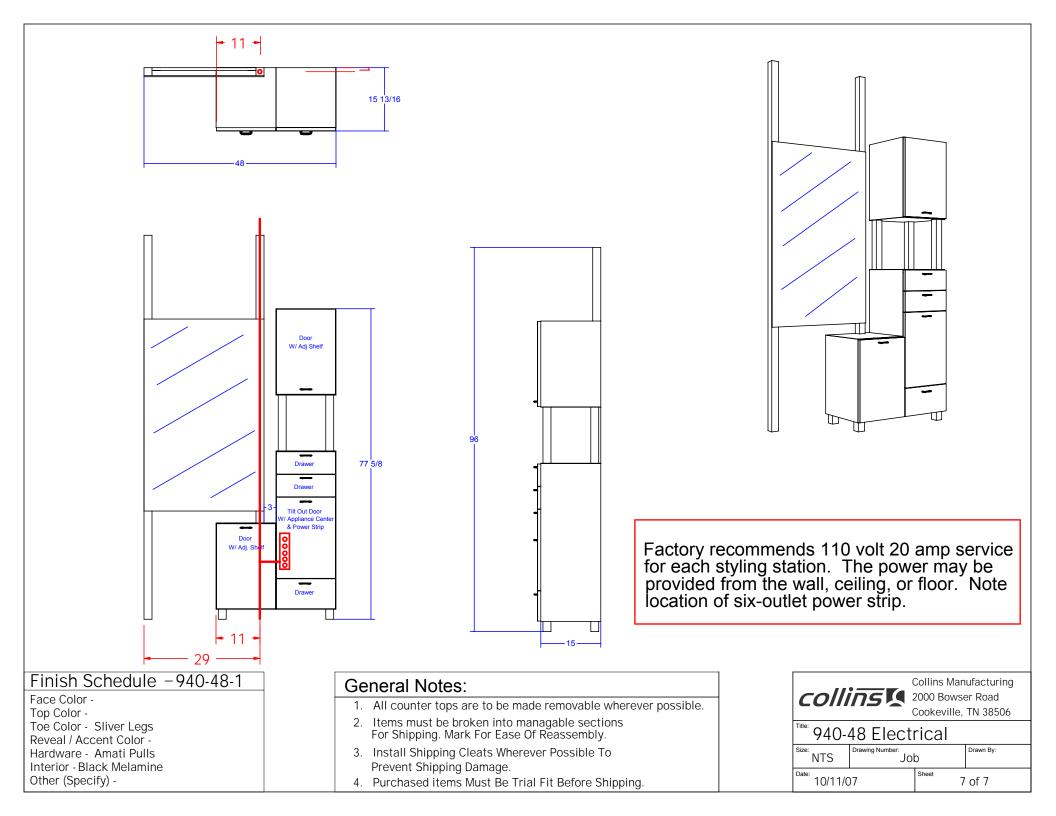

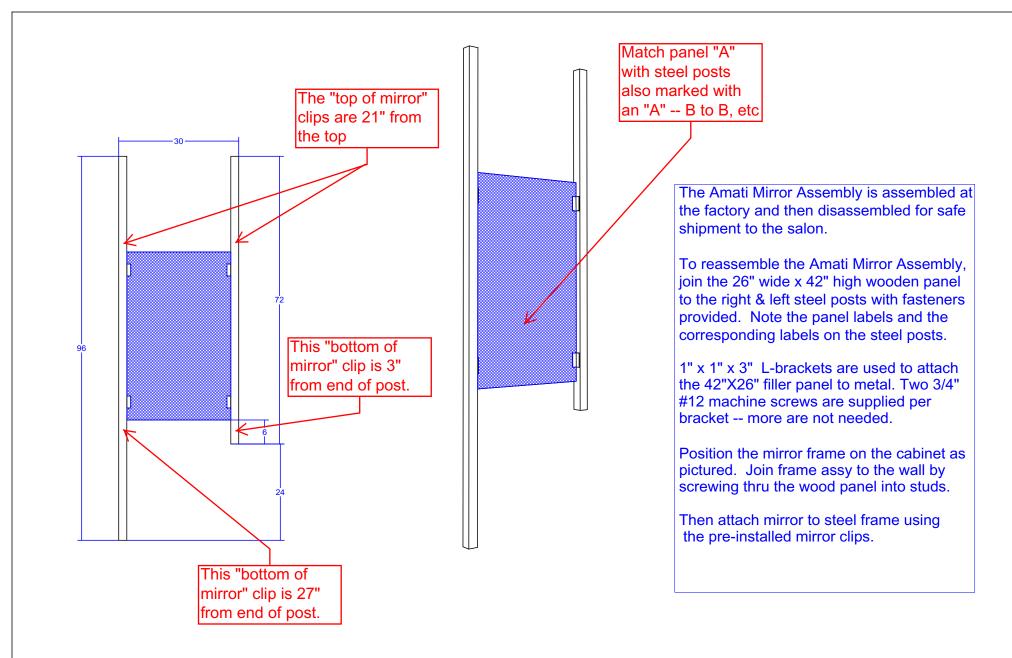

Finish Schedule -

Face Color - Top Color -

Toe Color - Sliver Legs Reveal / Accent Color -Hardware - Amati Pulls Interior - Black Melamine Other (Specify) -

General Notes:

- 1. All counter tops are to be made removable wherever possible.
- 2. Items must be broken into managable sections For Shipping. Mark For Ease Of Reassembly.
- 3. Install Shipping Cleats Wherever Possible To Prevent Shipping Damage.
- 4. Purchased items Must Be Trial Fit Before Shipping.



Size: Drawing Number: Drawn By: ZANE

Date: Sheet